
# WORLD-BEAM® QS18 Mechanically Adjustable Background Suppression Sensors



# Datasheet

Miniature sensors with visible red LED or visible red laser

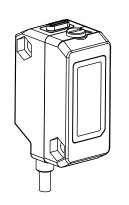

- Exceptional optical performance, comparable to larger sensors
- Simple multi-turn screw adjustment of cutoff distance
- 10 V dc to 30 V dc operation, with complementary (SPDT) NPN or PNP outputs, depending on model
- Less than 1 millisecond output response for excellent sensing repeatability

### Laser Models:

- Narrow effective beam (approx. 1 mm spot size) for small-object detection and precise position control
- Crosstalk rejection algorithm to avoid optical disturbance from adjacent sensors
- Class 2 models have reduced excess gain within 20 mm of sensor for decreased susceptibility to the effects of lens contamination and to allow use of external lens shield



## WARNING: Not To Be Used for Personnel Protection

Never use this device as a sensing device for personnel protection. Doing so could lead to serious injury or death. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.


# Models

Models	Sensing Beam	Range	Cordset <sup>1</sup>	Supply Voltage	Output Type
QS18VN6AF100	660 nm Visible Red LED	1 mm (0.04 in) to cutoff point; Adjustable cutoff point, 20-100 mm (0.8 in-4 in)	2 m (6.5 ft) 4-wire	10 to 30 V dc	NPN
QS18VP6AF100					PNP
QS18VN6LAF	650 nm Visible Red Class 1 Laser	1 mm (0.04 in) to cutoff point; Adjustable cutoff point, 30-150 mm (1.2 in-6 in)			NPN
QS18VP6LAF					PNP
QS18VN6LAF250	658 nm Visible Red	20 mm (0.08 in) to cutoff point; Adjustable cutoff point, 50-250 mm (2 in-10 in)			NPN
QS18VP6LAF250	Class 2 Laser				PNP

1 Only standard 2 m (6.5 ft) cable models are listed.

- For 9 m (30 ft) cables: add suffix "W/30" to the model number (for example, QS18VN6AF100 W/30).
- For 4-pin Pico-style pigtail QD: add suffix "Q" to the model number (for example, QS18VN6AF100Q); accessory mating cordset required.
- For 4-pin Euro-style pigtail QD: add suffix "Q5" to the model number (for example, QS18VN6AF100Q5); accessory mating cordset required.



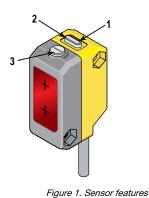

The QS18 Adjustable-Field Sensors are a full-featured sensor in a miniature package. It provides background suppression sensing capability for small or difficult-to-reach areas. Models are available with a visible red LED sensing beam, or one of two visible red lasers (see *Models* on page 1).

These adjustable-field sensors are able to detect objects of relatively low reflectivity, while ignoring other objects in the background (beyond the cutoff point). The cutoff distance is mechanically adjustable, using the 5-turn adjustment screw on the sensor top. Backgrounds and background objects must *always* be placed beyond the cutoff distance.

- 1. Green: Power Indicator (Flashes for Output Overload)
- 2. Amber: Light Sensed Indicator (Flashes for Low Gain Conditions)
- 3. Cutoff Point Adjustment Screw

# Adjustable-Field Sensing — Theory of Operation

The sensor compares the reflections of its emitted light beam (E) from an object back to the sensor's two differently-aimed detectors R1 and R2 (see *Figure 2* on page 2). If the near detector (R1) light signal is stronger than the far detector (R2) light signal (see object A, closer than the cutoff distance), the sensor responds to the object. If the far detector (R2) light signal is stronger than the near detector (R1) light signal (see object B, object beyond the cutoff distance), the sensor ignores the object.

The cutoff distance for these sensors is adjustable. Objects lying beyond the cutoff distance are ignored, even if they are highly reflective. However, it is possible to falsely detect a background object, under certain conditions (see *Background Reflectivity and Placement* on page 4).

In this document, the letters E, R1, and R2 identify how the sensor's three optical elements (Emitter "E", Near Detector "R1", and Far Detector "R2") line up across the face of the sensor. The location of these elements defines the sensing axis (see *Figure 6* on page 4). The sensing axis becomes important in certain situations, such as those illustrated in *Figure 10* on page 5 and *Figure 11* on page 5.

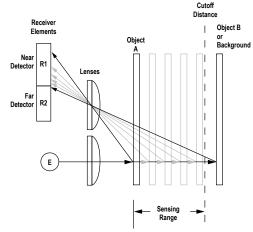


Figure 2. Adjustable field sensing concept

# Color Sensitivity

The effects of object reflectivity on cutoff distance, though small, may be important for some applications. It is expected that at any given cutoff setting, the actual cutoff distance for lower reflectance targets will be slightly shorter than for higher reflectance targets (see the cutoff point deviation graphs). This behavior is known as color sensitivity.

The excess gain curves were generated using a white test card of 90% reflectance. Objects with reflectivity of less than 90% reflect less light back to the sensor, and thus require proportionately more excess gain in order to be sensed with the same reliability as more reflective objects. When sensing an object of very low reflectivity, it may be especially important to sense it at or near the distance of maximum excess gain.

In the cutoff point deviation graphs, the percentage of deviation indicates a change in the cutoff point for either 18% gray or 6% black targets, relative to the cutoff point set for a 90% reflectance white test card.

For example, in *Figure 3* on page 3, the cutoff point decreases 10% for a 6% reflectance black target when the cutoff point is adjusted for 100 mm (4 in) using a 90% reflectance white test card. In other words, the cutoff point for the black target is 90 mm (3.6 in) for this setting.

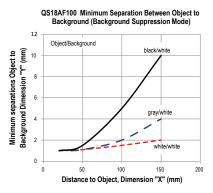
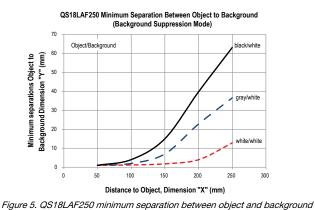


Figure 3. QS18AF100 minimum separation between object and background




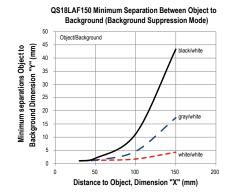


Figure 4. QS18LAF150 minimum separation between object and background

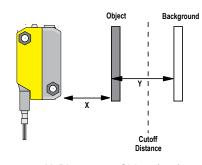


X: Distance to Object (mm) Y: Minimum Separation Between Object and Background (mm)

# Installation

# Wiring Diagrams


Cabled wiring diagrams are shown.Quick disconnect (QD) wiring diagrams are functionally identical.



Load

Load

2



Load

Load

4

2

Wiring Key

- 1 = Brown 2 = White
- 3 = Blue


4 = Black



# Setting the Cutoff Distance

The cutoff distance for the QS18AF models may be adjusted between 20 mm and 100 mm (0.8 in to 4 in); for QS18LAF models, between 30 mm and 150 mm (1.2 in to 6 in); and for QS18LAF250 models, between 50 mm and 250 mm (2 in to 10 in).

To properly set the cutoff point, position the lightest possible background to be used, at the closest position it will come to the sensor during use. Using a small screwdriver in the adjustment screw, adjust the cutoff distance until the threshold is reached and the yellow Light Sensed indicator changes state. (If the indicator never comes ON, the background is beyond the maximum sensing distance and will be ignored.) Repeat the procedure, using the darkest target, placed in its most distant position for sensing. Adjust the cutoff approximately midway between the two positions (*Figure 7* on page 4).



When an object approaches from the side, the most reliable sensing usually occurs when the line of approach is parallel to the sensing axis.

Figure 6. Sensing Axis

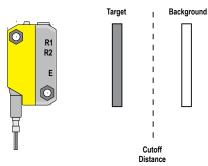


Figure 7. Set cutoff distance approximately midway between the farthest target and the closest background

## Sensing Reliability

For highest sensitivity, position the target for sensing at or near the point of maximum excess gain. See the Performance Curves section for the excess gain curves. Maximum excess gain for model QS18VN6AF100 at a 20 mm cutoff occurs at a lens-to-object distance of about 7 mm, for example. Sensing at or near this distance makes the maximum use of each sensor's available sensing power. The background must be placed beyond the cutoff distance. Note that the reflectivity of the background surface also may affect the cutoff distance. Following these guidelines improves sensing reliability.

### **Background Reflectivity and Placement**

Avoid mirror-like backgrounds that produce specular reflections. A false sensor response occurs if a background surface reflects the sensor's light more to the near detector (R1) than to the far detector (R2). The result is a false ON condition (*Figure 8* on page 5). Correct this problem by using a diffusely reflective (matte) background, or angling either the sensor or the background (in any plane) so the background does not reflect light back to the sensor (*Figure 9* on page 5). Position the background as far beyond the cutoff distance as possible.

An object beyond the cutoff distance, either stationary (and when positioned as shown in *Figure 10* on page 5), or moving past the face of the sensor in a direction perpendicular to the sensing axis, may cause unwanted triggering of the sensor if more light is reflected to the near detector than to the far detector. Correct the problem by rotating the sensor 90° (*Figure 11* on page 5). The object then reflects the R1 and R2 fields equally, resulting in no false triggering. A better solution, if possible, may be to reposition the object or the sensor.




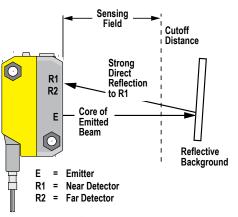


Figure 8. Reflective Background - Problem

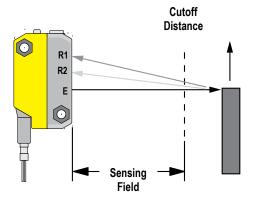

A reflective background object in this position or moving across the sensor face in this axis and direction may cause a false sensor response. *Figure 10. Object Beyond Cutoff - Problem* 

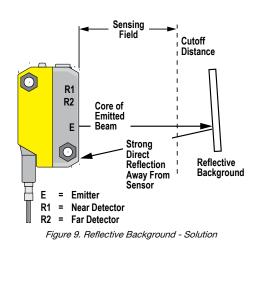

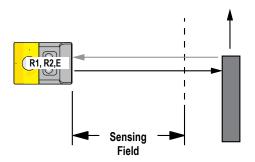

A reflective background object in this position or moving across the sensor face in this axis is ignored. *Figure 11. Object Beyond Cutoff - Solution* 

# Specifications

#### Supply Voltage

QS18AF Models: 10 to 30 V dc (10% maximum ripple) at less than 25 mA, exclusive of load QS18LAF / QS18LAF250 Models: 10 to 30 V dc (10% maximum ripple) at

less than 15 mA, exclusive of load

### Sensing Beam

QS18AF Models: Visible red LED, 640 nm QS18LAF / QS18LAF250 Models: Visible red laser (see below)

### Laser Characteristics - QS18AF Models

N/A

#### Laser Characteristics - QS18LAF Models

Wavelength: 650 nm visible red Class 1 laser Pulse Width: 7 microseconds Rep Rate: 130 microseconds Average Output Power: 0.065 mW

#### Laser Characteristics - QS18LAF250 Models

Wavelength: 658 nm visible red Class 2 laser Pulse Width: 7 microseconds

Rep Rate: 130 microseconds Average Output Power: 0.2 mW

#### Supply Protection Circuitry

Protected against reverse polarity and transient voltages

#### **Output Configuration - All Models**

Solid-state complementary (SPDT): NPN or PNP (current sinking or sourcing), depending on model; Rating: 100 mA maximum each output at 25 °C

Protected against false pulse on power-up and continuous overload or short circuit of outputs

#### **Output Configuration - QS18AF Models**

Off-state leakage current: less than 50 µA at 30 V dc ON-state saturation voltage: less than 1.5 V at 10 mA; less than 3.0 V at 100

#### Output Configuration - QS18LAF / QS18LAF250 Models

Off-state leakage current: NPN: less than 200 µA at 30 V dc (See Application Note 1); PNP: less than 10 µA at 30 V dc ON-state saturation voltage: NPN: less than 1.6 V at 100 mA; PNP: less than

3.0 V at 100 mA **Output Response** 

QS18AF Models: 850 microseconds ON/OFF; 100 ms delay on power-up;

QS18LAF / QS18LAF250 Models: 700 microseconds ON/OFF; 200 ms delay on power-up; outputs do not conduct during this time

#### Connections

2 m (6.5 ft) 4-wire PVC cable, 9 m (30 ft) PVC cable, 4-pin Pico-style or Euro-style 150 mm (6 in) pigtail QD, depending on model

#### **Environmental Rating**

IEC IP67; NEMA 6; UL Type 1

#### **Operating Conditions**

95% relative humidity at 50 °C (non-condensing) QS18AF Models: –20 °C to +70 °C (–4 °F to +158 °F) QS18LAF / QS18LAF250 Models: –10 °C to 50 °C (14 °F to 122 °F)

#### Certifications



#### Application Notes

NPN off-state leakage current is < 200  $\mu\text{A}$  for load resistances > 3 k $\Omega$  or optically isolated loads. For load current of 100 mA, leakage is < 1% of load current

### Repeatability

QS18AF Models: 85 microseconds QS18LAF / QS18LAF250 Models: 130 microseconds

### Spot Size

QS18AF100		
Distance (mm) Size (Horizontal × Vertical)		
20	5 × 5	
75	7 × 7	
150	10 × 10	

### -----

QS18LAF150		
Distance (mm)	Size (Horizontal × Vertical)	
30	3.0 × 1.0	
75	3.0 × 1.0	
150	2.5 × .80	

QS18LAF250		
Distance (mm) Size (Horizontal × Vertical)		
50	2.2 × 1.1	
125	2.0 × 1.0	
250	1.5 × .75	

#### Adjustments

Five-turn adjustment screw sets cutoff distance between min. and max. positions, clutched at both ends of travel

#### Construction

ABS housing, acrylic lens cover, 2.5 mm and 3 mm mounting hardware included

#### Laser Classification

QS18AF Models: N/A

**QS18LAF Models:** Class 1 laser product; Complies with IEC 60825-1:2001 and 21 CFR 1040.10, except for deviations pursuant to Laser Notice 50, dated 7-26-01

QS18LAF250 Models: Class 2 laser product; Complies with IEC 60825-1:2001 and 21 CFR 1040.10, except for deviations pursuant to Laser Notice 50, dated 7-26-01

#### **Required Overcurrent Protection**



**WARNING:** Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply


Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (Amps)	
20	5.0	
22	3.0	
24	2.0	
26	1.0	
28	0.8	
30	0.5	


# Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise.

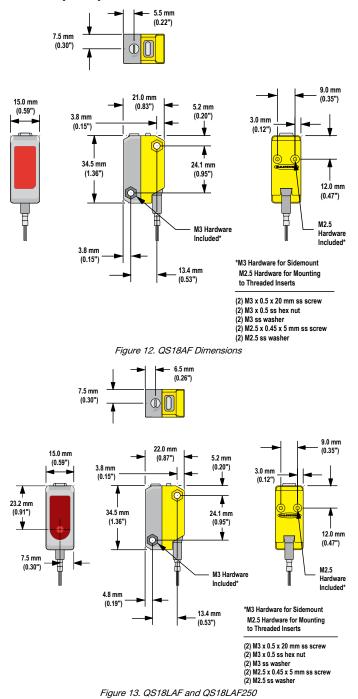

## Performance Curves—Excess Gain

Performance based on 90% reflectance white test card

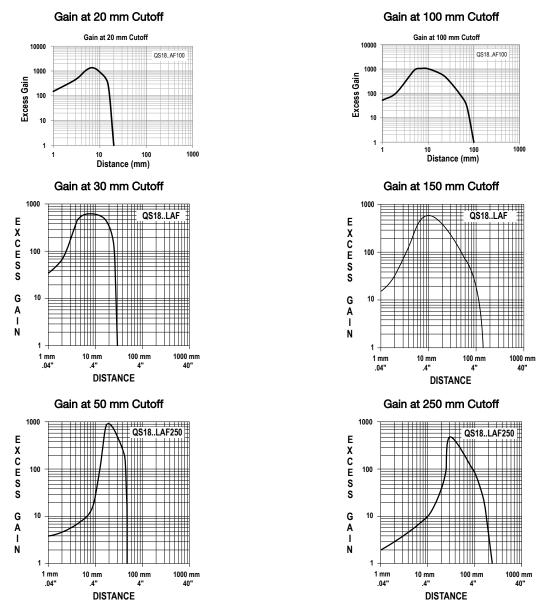

# Description of Laser Classes

### Class 1 Lasers

Class 1 lasers are lasers that are safe under reasonably foreseeable conditions of operation, including the use of optical instruments for intrabeam viewing.

Reference IEC 60825-1:2001, Section 8.2.

Class 1 Laser Characteristics: See Specifications on page 6.



### CAUTION: Do Not Disassemble for Repair

This device contains no user-serviceable components. Do not attempt to disassemble for repair. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. A defective unit must be returned to the manufacturer.



### Class 2 Lasers

Class 2 lasers are lasers that emit visible radiation in the wavelength range from 400 nm to 700 nm, where eye protection is normally afforded by aversion responses, including the blink reflex. This reaction may be expected to provide adequate protection under reasonably foreseeable conditions of operation, including the use of optical instruments for intrabeam viewing.

Reference IEC 60825-1:2001, Section 8.2.

Class 2 Laser Characteristics: See Specifications on page 6.

# For Safe Laser Use (Class 1 or Class 2):


- Do not point the laser at a person's eye.
- Mount open laser beam paths either above or below eye level, where practical.
- Terminate the beam emitted by the laser product at the end of its useful path.

## Accessories

# Quick-Disconnect (QD) Cordsets

Use the Pico-style cordsets with QS18 with Q suffix; use the Euro-style cordsets with QS18 with Q% suffix.

4-Pin Snap-on M8/Pico-Style Cordsets					
Model	Length	Style	Dimensions	Pinout (Female)	
PKG4-2	2 m (6.56 ft)	Straight	→ 32 Typ. → → ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓	4 2 3 2 1 1 = Brown 2 = White 3 = Blue 4 = Black	

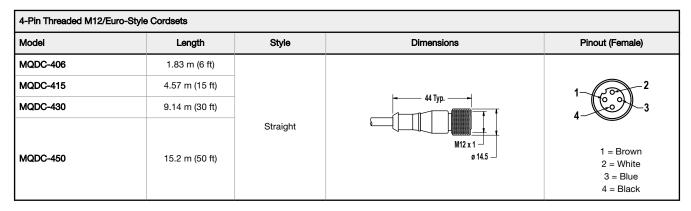

# Mounting Brackets

### SMBQS18A


- Wrap-around protection bracket
- Die-cast bracketBase fits 18 mm threaded
- hole
- Metal hex nut, lock washer and grommet included
- Mounting holes specially designed for QS18AF sensors

#### Hole size: A = Ø 15.3

#### SMBQS18YL

- Heavy-duty die-cast bracket for industrial protection
- Replaceable window (A)
- M18 vertical mount-option
- Nut and lock washer included
- Only for use with Class 2
  laser models

Hole size: B = ø 15.3

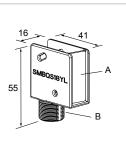

19

62

25

All measurements are listed in millimeters, unless noted otherwise.

# Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

SMBQS18AF

**Right-angle mounting** 

14-ga. 304 stainless steel

bracket

Hole center spacing: A to B = 20.3

**Hole size:**  $A = 4.3 \times 9.4$ , B = ø 4.3

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranty. Any modifications to this product warres express approval by Banner Engineering Corp will void the product warrantes. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.



